




Mounting instructions
Bubble pot
EPS 50

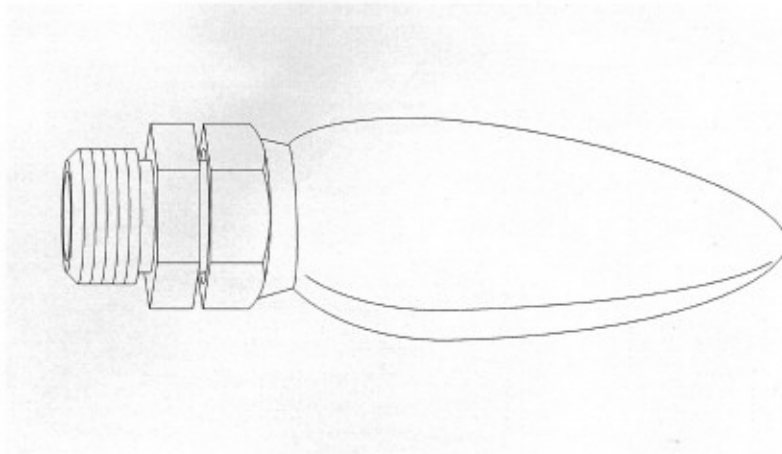

English


Installation of the bubble pot

The EPS 50 bubble pot is designated for the bubble-in sensor "Nimbus". It replaces the old bubble pot for surface waters.

The EPS 50 bubble pot has a 1" T-piece which is suitable for all kinds of fixing-possibilities. With 1" standard parts for plumbing it can be fixed to consolidated and natural banks as well as to vertical walls.

The bubble pot has to be installed in the direction of the flow!

Fig. 1: install the bubble pot.

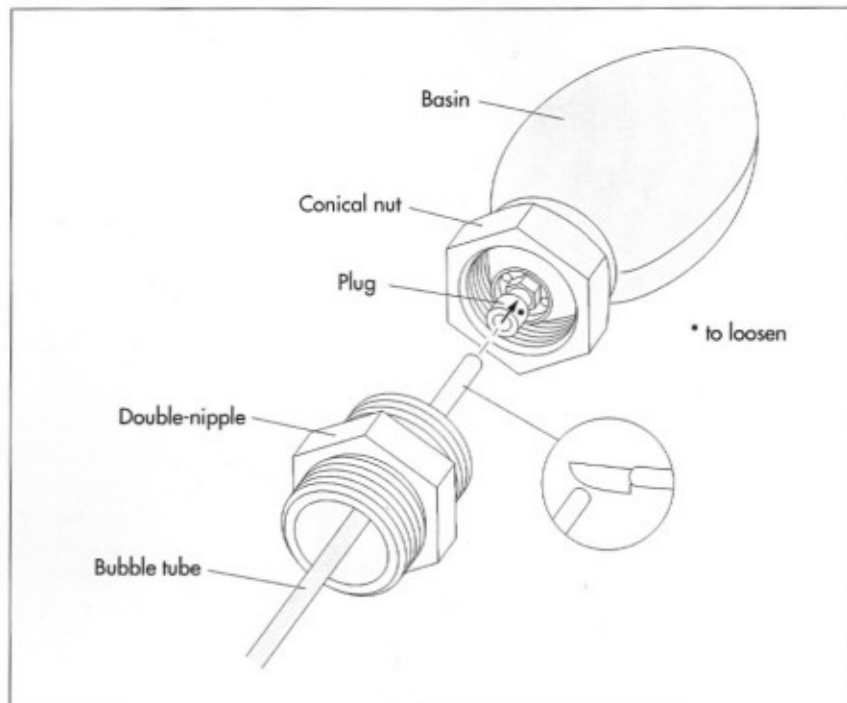


- Lead the bubble tube through a conduit (metal or plastic) to the place where the bubble pot has to be installed; see picture 2 and 3
- Cut the bubble tube rightangled which a sharp blade (e.g. scalpel); see picture 1. Do not use scissors.
- Put the tube as far as possible into the plug. The plug is designed in a way that the basin can be turned without distortion of the tube. To disconnect the tube push the plug towards the conical nut and pull out the tube. Cut the tube by approx. 1 cm before connecting it again.
- Screw the double-nipple (SW 41) on the pre-installed T-piece.
- Screw the conical nut (SW 41) of the bubble pot on the double-nipple.

Example of application: Installation at embankment

Picture 2 shows a possibility to fix the bubble pot to consolidated or natural embankments. The actual fixing is made by a 1" metal pipe (waterpipe) which is digged / rammed into the ground or is embedded by concrete.

Picture 2: Fix bubble pot EPS 50 to the embankment of a water.

The picture shows a low waterlevel.
Actually the bubble pot must be completely under water.

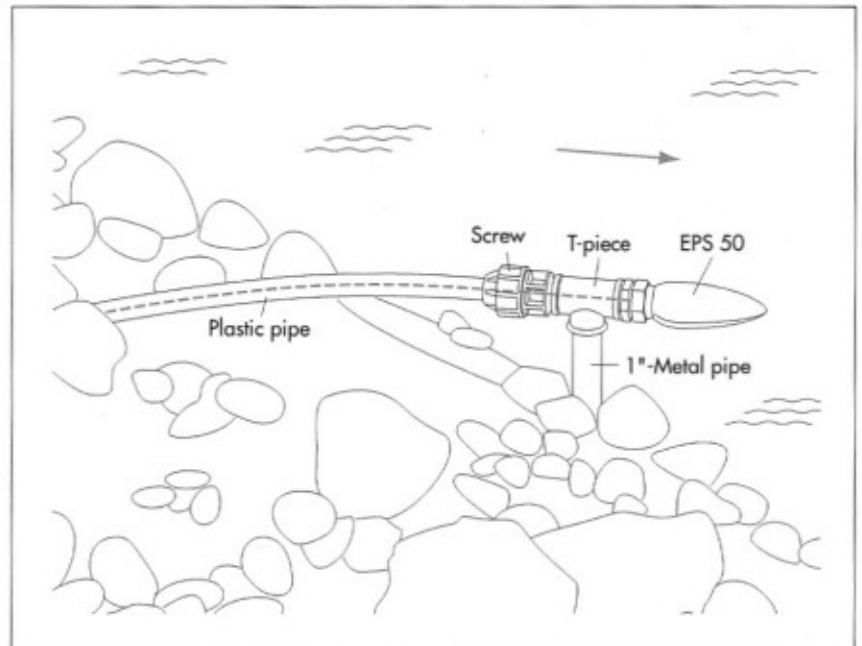


Example of application: Wall-mounting

Picture 3 shows two possibilities how the bubble pot can be fixed to a wall (jetty-wall, sheet piling...) Note that the bubble pot must be fixed stable enough that it does not vibrate even at high velocities of flow. For this purpose, as it is shown in the left drawing, the metal pipe can be put into the bottom of the water to increase the stability. If this is not necessary the open end of the T-piece must be closed by a stopper (included in the delivery).

Picture 3. Fix bubble pot EPS 50 to a vertical wall

The picture shows a low waterlevel.
Actually the bubble pot must be completely under water.

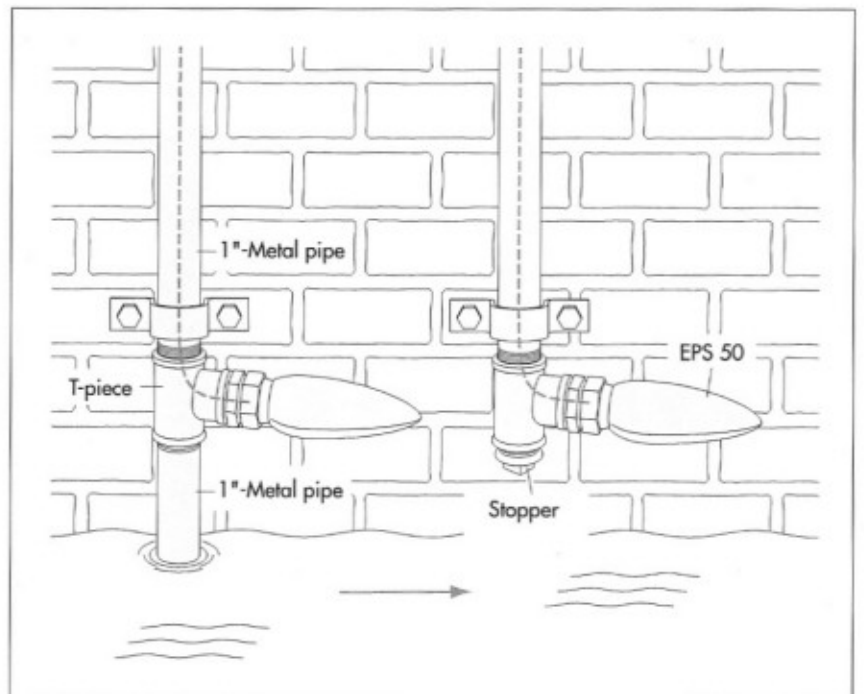

Adjust bubble pot to the direction of flow

To ensure a correct functioning of the bubble pot it is important to adjust it exactly horizontal and in the direction of flow (max. tolerance $\pm 5^\circ$). For this purpose the basin has a ball-and socket joint which allows for adjustments by $\pm 15^\circ$ in every direction.